

Operating Instructions:

- 1. Twist cap clockwise for propel and repel of ball-point pens/pencil refill.
- 2. To advance the pencil lead, push downward on the pen top when the pencil sleeve is visible.
- 3. To retract pencil lead, hold top of cap down and push lead back into sleeve/barrel.
- 4. The eraser for the pencil is located in the top. Unscrew top to expose the eraser.

Ballpoint Refill Replacement:

Remove barrel by pulling away from cap. Pull refill from refill tube to remove. Insert new refill.

Pencil Refill Replacement:

- 1. Pull out remaining unused 1/2 inches of lead from tip of pencil by pushing downward on the pen top when the pencil sleeve is visible.
- 2. Remove barrel by pulling away from cap. Pull the pencil mechanism from the tube. Insert up to 3 replacement leads into tube. Place pencil mechanism assembly back into position.
- 3. Unscrew top to expose eraser, remove eraser and ferrule from the eraser holder. Insert new eraser and ferrule into the eraser holder and replace the top.